

# THE RM

# DIRECTION COUPLER

# SYSTEM

---



## THE USE OF THE DIRECTIONAL COUPLER MEASUREMENT SYSTEM

A directional coupler serves as a useful diagnostic tool to measure the amount of forward and backward propagating power in a monomode waveguide. The directional coupler provides the operator of a microwave installation with helpful insight into his system and enables him to better understand the process he is performing. He also can detect trapped resonances and hence a possible too high VSWR that if not observed carefully may jeopardize his installation.

In microwave processing installations generally consisting of a

- high power voltage supply
- microwave generator
- isolator
- tuner
- applicator

(figure 1) the directional coupler is often installed either

- between the generator and the tuner or
- between the tuner and the applicator (which is the case in fig 1)

In the first case it is used to measure the amount of backward reflected power which helps the operator to find the optimum position of the tuner stubs. However after tuning of the system the directional coupler can not give any information about the behaviour of the applicator. Also in the meantime there are isolators available that have diode detectors at different ports allowing an independent measurement of the forward and backward propagating power at this position.

More useful is a location of the directional coupler between the tuner and the applicator. The tuning can be performed by evaluating of the signal of the mentioned diode detectors either at the isolator or by observing both the forward and backward signal of the directional coupler. The better the system is tuned the higher is the signal from the directional coupler. This however leads to a rough tuning only.

The most useful application of the directional coupler starts as soon as the system finally is tuned. This is because for a tuned system the applicator and the feed waveguide section between applicator and tuner can be considered as a resonator. The lower the absorption of the good in the applicator is the higher is the quality factor of this resonator and the higher is the field strength de-

tected by the directional coupler. Hence any change of absorption behaviour of the good during the process can be observed.

## PRINCIPLE OF OPERATION

The axial dependence of the field amplitude of the superposition of the forward and backward propagating power can be written as:

$$f(z) = E_0 (e^{ik_z z} + a e^{-ik_z z - \Phi})$$

which means we have three unknowns

- the amplitude  $E_0$  of the forward propagating signal
- the amplitude  $aE_0$  of the backward propagating signal
- the relative phase between these signals

For that reason at least three simultaneous measurements have to be made at three different positions. These measurements are performed by means of coaxial antennas and diodes.

However there are imperfections of the measurement due to

- the diode characteristic
- noise

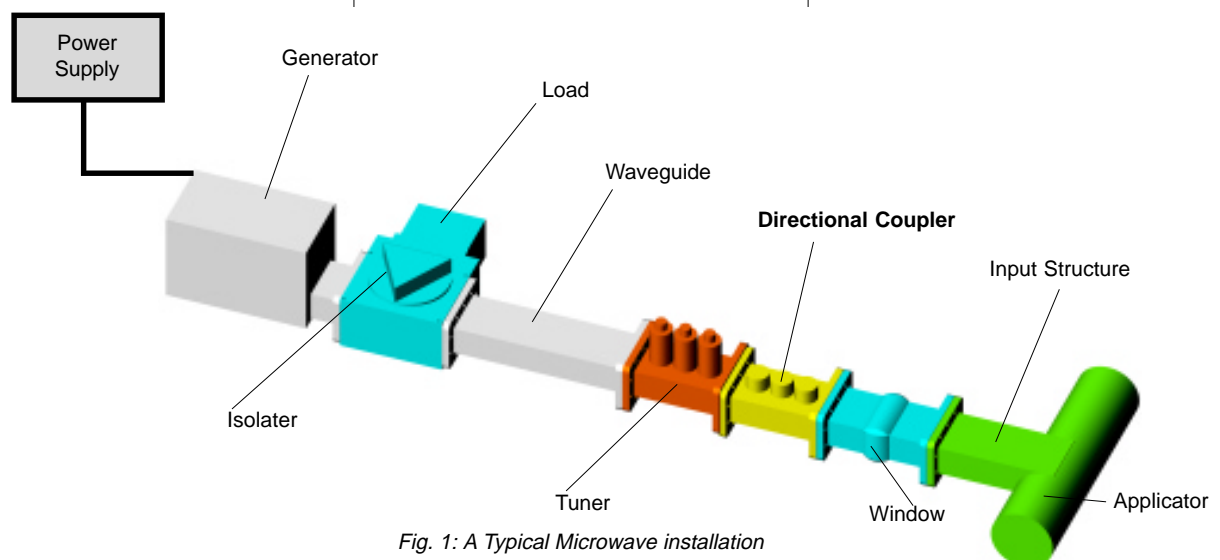


Fig. 1: A Typical Microwave installation

- power of the magnetron generated in higher harmonics that are detected as well and that perturb the measurements.

For that reason the power is measured at four different locations. By means of an in-house developed algorithmus not only the power propagating on both directions is determined but also the precision of the measurement can be detected.

## DESCRIPTION OF THE SETUP

Figure 2 shows the directional coupler for a standard R-9 waveguide.

Four antennas are located along the waveguide at a distance of a fourth of the waveguide wavelength. The diodes attached to the antennas convert the measured signal into a voltage signal that is amplified in a box. The amplified signal is evaluated by means of a Pentium PC that is equipped with a A/D card. The total system is shown in figure 2. The system provides either digital information, analog signals or a utility for process control. Figure 3 shows a screenshot of the RKR9 measurement software.



Fig.2: The RKR9 Directional Coupler Measurement System

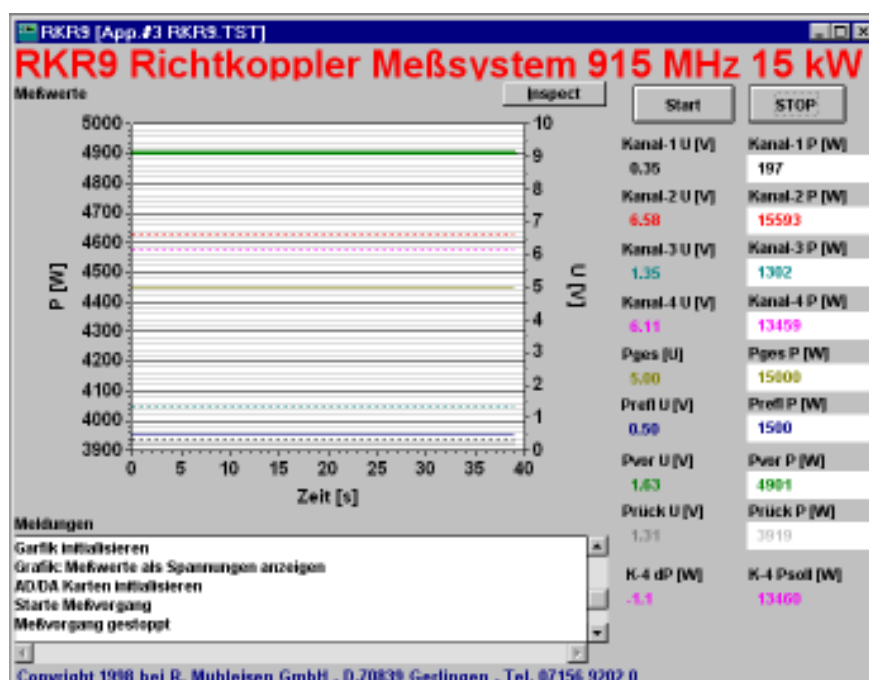


Fig. 3: Screenshot of the RKR9 Measurement Software

## How to CONTACT RM

For further informations please contact:

Reinhold Mühleisen GmbH  
Carl-Zeiss-Straße 7  
D-70839 Gerlingen  
Germany

Phone:  
+49 7156 9202 0

Fax:  
+49 7156 49126

eMail :  
info@muehleisen.de